



**Quick Start Guide**  
**Wireless Mesh Gateway**  
**Model: E5B-M-GW**



This Quick Start Guide provides very high level installation instructions. Detailed installation instructions are available in the Product Guide at [eyedro.com/support](http://eyedro.com/support)

This product is intended for indoor use only

**Note:** Always use the 5VDC power adapter that was supplied with your model E5B-M-GW gateway.

**Limited One Year Warranty**

Full warranty details are available in the Product Guide at [eyedro.com/support](http://eyedro.com/support).

[eyedro.com/support](http://eyedro.com/support)



Visit [eyedro.com/support](http://eyedro.com/support) for online product setup wizard, user manuals, videos, and various support resources


**Online Support Resources**

Visit [eyedro.com](http://eyedro.com) for any questions or comments.  
We value your feedback.



**Important:** This product contains no user serviceable components. Do not attempt to open the case of the unit or tamper with the internal components. Doing so will void the product warranty.

## 1. Verify Package Contents

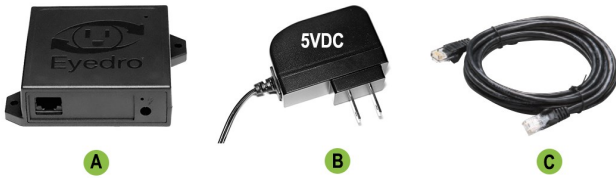

	Quantity	Description
<b>A</b>	1	Eyedro gateway module
<b>B</b>	1	5VDC power adapter
<b>C</b>	1	1m (3ft) Ethernet cable


## 2. Record Serial Number:

(located under barcode on module)

__-__-__	-	____-____-____
----------	---	----------------

## 4. Create a MyEyedro User Account

- 4.1 Go to [my.eyedro.com](https://my.eyedro.com) to create your online account (or log in if you have an existing account).

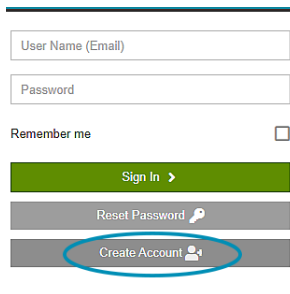

User Name (Email)  
Password  
Remember me   
Sign In >  
Reset Password   
Create Account

- 4.2 Add the device to your user account: go to Configuration, select Devices then enter the serial number you recorded in Step 2.
- 4.3 ENJOY! Log into MyEyedro as often as you like to view your electricity consumption.
- 4.4 For more details about the MyEyedro cloud service, review the MyEyedro User Guide located at [eyedro.com/support](https://eyedro.com/support)

## 3. Install Hardware

- 3.1 Connect one end of the provided Ethernet cable to the RJ45 port on the Eyedro gateway module, connect the other end to an open port on your router.
- 3.2 Connect the 5VDC power adapter to the Eyedro gateway module.

