

Visit **eyedro.com** for any questions or comments. We value your feedback.

Model: E5B-M-REP

Wireless Mesh Repeater

Quick Start Guide



Before Getting Started

This Quick Start Guide provides very high level installation instructions. Detailed installation instructions are available in the Product Guide at eyedro.com/support

This product is intended for indoor use only

Note: Always use the 5VDC power adapter that was supplied with your model E5B-M-REP repeater.



mizard, user manuals, videos, and various support

Visit eyedro.com/support for online product setup

Online Support Resources

eyedro.com/support

Limited One Year Warranty

resources

Full warranty details are available in the Product Guide at **eyedro.com/support.**

Important: This product contains no user serviceable components. Do not attempt to open the case of the unit or tamper with the internal components. Doing so will void the product warranty.




1. Verify Package Contents



| | Quantity | Description |
|---|----------|------------------------|
| A | 1 | Eyedro repeater module |
| В | 1 | 5VDC power adapter |

3. Install Hardware

- 3.1 Find an acceptable installation location between the device (or cluster of devices) and the desired gateway module. Be sure to follow Wireless Mesh Best Practices detailed in the complete product guide.
- **3.2** Connect the 5VDC power adapter to the Eyedro repeater module.

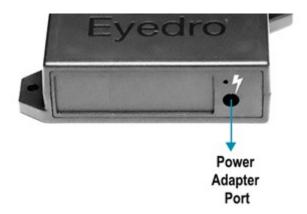


2. Record Serial Number:

(located under barcode on module)



4. Create a MyEyedro User Account

4.1 Go to **my.eyedro.com** to create your online account (or log in if you have an existing account).

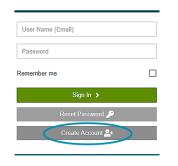

- **4.2** Add the device to your user account: go to Configuration, select Devices then enter the serial number you recorded in Step 2.
- **4.3** ENJOY! Log into MyEyedro as often as you like to view your electricity consumption.
- 4.4 For more details about the MyEyedro cloud service, review the MyEyedro User Guide located at eyedro.com/support