

Important: This product contains no user serviceable components. Do not attempt to open the case of the unit or tamper with the internal components. Doing so will void the product warranty.

Full warranty details are available in the Product Guide at eyedro.com/support.

Limited One Year Warranty

eyedro.com/support



Visit eyedro.com/support for online product setup wizard, user manuals, videos, and various support resources

Online Support Resources

Visit eyedro.com for any questions or comments.
We value your feedback.



Before Getting Started

This Quick Start Guide provides very high level installation instructions. Detailed installation instructions are available in the Product Guide at eyedro.com/support

This product is intended for indoor use only




Quick Start Guide

Temperature Monitoring System
with Wireless Mesh connectivity

Model: E5B-M-T2

1. Verify Package Contents

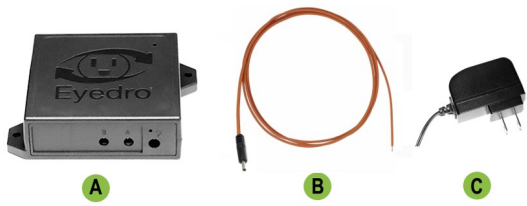

	Quantity	Description
A	1	Eyedro temperature module
B	2	Thermocouple(s)
C	1	5VDC power adapter

2. Record Serial Number:

(located under barcode on module)

__	__	-	__	__	__	__
----	----	---	----	----	----	----

4. Create a MyEyedro User Account

4.1 Go to my.eyedro.com to create your online account (or log in if you have an existing account).

User Name (Email)
Password
Remember me
Sign In >
Reset Password
Create Account

4.2 Add the device to your user account: go to Configuration, select Devices then enter the serial number you recorded in Step 2.

4.3 ENJOY! Log into MyEyedro as often as you like to view your electricity consumption.

4.4 For more details about the MyEyedro cloud service, review the MyEyedro User Guide located at eyedro.com/support

3. Install Hardware

- 3.1 Place the tip of the thermocouple in direct contact with the surface to measure the temperature.
- Optionally, apply thermal paste or thermal padding between the surface and the thermocouple tip.

3.2 Connect thermocouple cables and power adapter to the Eyedro module.

