



This product must only be used with approved inlet and outlet power cords and must be properly rated for the application. Current and/or voltage ratings of the device or appliance being monitored (connected to the outlet) must not exceed the ratings of the Eyedro Inline Monitoring product.



All wireless mesh products require connection through an Eyedro Wireless Mesh Gateway module (sold separately). Instructions assume your gateway is already installed and configured correctly.

This product is intended for indoor use only.

This insert provides very high level installation instructions. Complete installation instructions and video can be found in the Product Manual located at eyedro.com/support

Before Getting Started

Important: This product contains no user serviceable components. Do not attempt to open the case of the unit or tamper with the internal components. Doing so will void the product Warranty.

Eyedro Green Solutions Inc. warrants this product for a period of one year from date of purchase for all defects in material and workmanship. Defective parts may be repaired or replaced, at the discretion of the manufacturer, during this period.

Limited One Year Warranty

Full Warranty policy details are available at eyedro.com



Eyedro[®]
GREEN SOLUTIONS INC.

Quick Start Guide


**Inline Wireless (Mesh) Electricity Monitor
(ILM.NODE.1E.*)**



Eyedro[®]
GREEN SOLUTIONS INC.

Visit eyedro.com for any questions or comments. We value your feedback.

1. Verify Package Contents

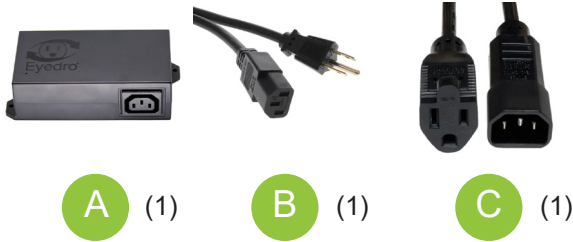

	QTY	DESCRIP-
A	1	Eyedro ILM.NODE.1E.* Module (15A model shown)
B	1	Inlet Power Cord (NEMA 5-15P to IEC C13 shown)
C	1	Outlet Power Cord (IEC C14 to NEMA 5-15R shown)

2. Record Serial Number

ILM.NODE.* SN: -


4. Connect Device to the Internet

4.1 Inline Wireless Mesh Electricity Monitors connect to the internet through Eyedro Wireless Gateway modules (sold separately).


Your inline monitor will automatically connect through a gateway module in range.

3. Install Hardware

3.1 Attach the provided outlet adapter cord to the Inline monitor.

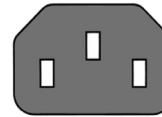


15A Model
(IEC 60320 C13)

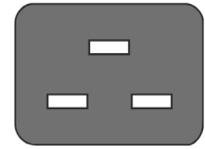


20A Model
(IEC 60320 C19)

3.2 Connect the device or appliance to be monitored to the receptacle side of the outlet adapter cord.

3.3 Attach the provided inlet power cord to the Inline monitor.

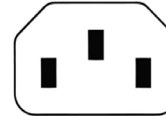

15A Model
(IEC 60320 C14)

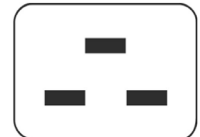


20A Model
(IEC 60320 C20)

3.4 Plug the power cord into a wall receptacle and proceed to step 4 (Connect Device to the Internet).

5. Create a MyEyedro User Account

5.1 GO ONLINE TO: my.eyedro.com to create your online account (or login if you have an existing account).

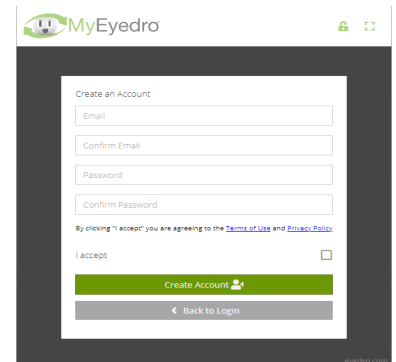

5.2 Add the device to your user account by entering the serial numbers recorded earlier.

5.3 ENJOY! Login to MyEyedro as often as you like to view your electricity consumption.

5.4 For more details regarding the MyEyedro service, review the MyEyedro User Guide located at eyedro.com/support