

Important: This product contains no user serviceable components. Do not attempt to open the case of the unit or tamper with the internal components. Doing so will void the product warranty.

Full warranty details are available in the Product Guide at eyedro.com/support.

Limited One Year Warranty

eyedro.com/support



Visit eyedro.com/support for online product setup wizard, user manuals, videos, and various support resources

Online Support Resources

Visit eyedro.com for any questions or comments. We value your feedback.



This product is intended for indoor use only

This Quick Start Guide provides very high level installation instructions. Detailed installation instructions are available in the Product Guide at eyedro.com/support



Before Getting Started




Quick Start Guide

Temperature Monitoring System
with Ethernet/Wi-Fi (2.4GHz) connectivity

E5B-EW-T2

1. Verify Package Contents

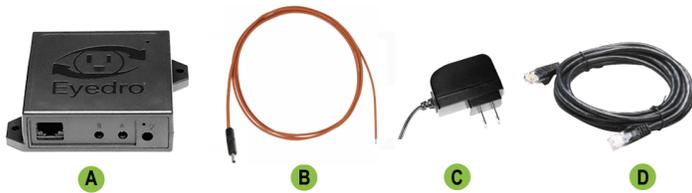

	Quantity	Description
A	1	Eyedro temperature module
B	2	Thermocouple(s)
C	1	5VDC power adapter
D	1	3m (10ft) Ethernet cable

2. Record Serial Number:

(located under barcode on module)

__	__	-	__	__	__
----	----	---	----	----	----

4. Connect Device to the Internet

4.1 If **connecting by Ethernet**, connect one end of the supplied Ethernet cable to an open port on your router and the other end to the Eyedro module. **Ethernet cable must be connected before powering device**

4.2 If **connecting by Wi-Fi (2.4GHz)**, use your computer or mobile device to connect to the Wi-Fi network created by your Eyedro: **Eyedro [Serial#]**.

4.2.1 Open a browser tab and go to **eyedro.com/setup**.

Eyedro Wi-Fi Settings

Network (SSID):

Show Password:

Password (Key):

4.2.2 From the Wi-Fi Settings page, enter the **name** (Network SSID) and **password** (Key) for the Wi-Fi network in your building. Click **Connect**.


4.2.3 Reconnect your mobile device or computer to the network that you just passed to your Eyedro.

3. Install Hardware

3.1 Place the tip of the thermocouple in direct contact with the surface to measure the temperature.

- Optionally, apply thermal paste or thermal padding between the surface and the thermocouple tip.

3.2 Connect thermocouple cables, Ethernet cable (if using) and power adapter to the Eyedro module.

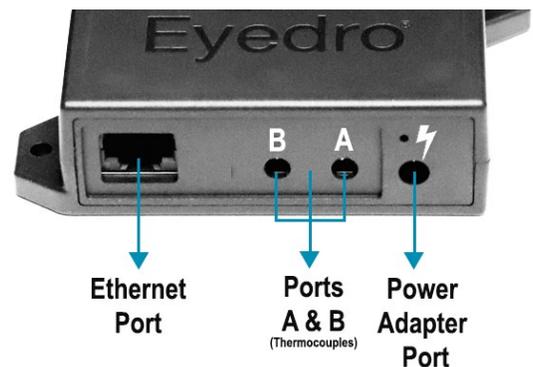

5. Create a MyEyedro User Account

5.1 Go to **my.eyedro.com** to create your online account (or log in if you have an existing account).

User Name (Email)

Password

Remember me

5.2 Add the device to your user account: go to Configuration, select Devices then enter the serial number you recorded in Step 2.

5.3 ENJOY! Log into MyEyedro as often as you like to view your electricity consumption.

5.4 For more details about the MyEyedro cloud service, review the MyEyedro User Guide located at **eyedro.com/support**